



www.continentalsports.co.uk

ELECTRICALLY WINCHED ROOF RETRACTABLE BASKETBALL GOALS 3-PHASE



IMPORTANT

The goals have been designed so that the operator can visually monitor progress of the raising or lowering of the goals. Ensure that no one is on the basketball court while the goals are operating. While goals are in operation observe them and if any control cables unexpectedly snag on the goal, push in the centre bottom emergency button on the control panel, then access the goals by means of a scaffold tower to release snagged wires, or call Continental's maintenance department for advice or assistance.

OPERATION

1. Ensure separate power isolator alongside control panel is switched ON.
2. Turn isolator handle on control panel (top left) through 90° clockwise to ON position (12 o'clock)
3. Put key with rounded end into centre ON/OFF button. Turn key to right and red button will pop out. When not in use this button must be pushed back into the locked position
4. If more than one control panel, select which goal is to be operated (normally No.1 is for the right hand goal and No.2 is for the left hand goal)
5. Now press and hold either of the lower left or right hand buttons with arrowheads.

UP – to lift basketball goal **DOWN** – to lower basketball goal

6. After goal has reached limit of movement, remove key and press in red button to prevent operation.
7. Note that the other square key is for use in the black cabinet lock should access be needed into the panel. We advise that this key is removed from the split ring and kept safe for maintenance access only
8. Please contact Continental if spare or additional keys are required
9. Above instructions should be read in conjunction with our control panel drawing No. Sh/07

See recommendations in the Continental maintenance manual concerning regular maintenance inspections and reports.

