



[www.continentalsports.co.uk](http://www.continentalsports.co.uk)

## INDOOR TENNIS POSTS (ANCHORED)



### CAUTION

These posts MUST be floor anchored when in use. They are not stable and cannot function when unanchored.

### ASSEMBLY

There are two different posts in the set – the fixed post and the ratchet post. Position each post over the floor anchor. Pass the thumbscrew through the hole in the base of the post. Hand tighten the thumbscrew into the anchor, clamping the base of the post firmly against the floor.

On the fixed post, pass the net headline over the grooved metal top and hook the loop of steel cable at the end of the headline to the cleat.

Pass the other end of the headline over the opposite post and feed the loop of steel cable at the end into the ratchet mechanism and clip it onto the metal angle hook.

Tighten the net using the handle. Do not over-tighten. Stop when the net reaches competition height.

### DISASSEMBLY

Unwind the handle until the loop of steel cable at the end of the headline can be removed from the ratchet mechanism. Remove both ends of the net and store.

Remove the thumbscrews in the anchors and store the thumbscrews – a nut is welded to the base of the posts for this purpose.